

Barracuda™

Integrated plow and spreader control system

Certified Power
SOLUTIONS®

Reliable integrated controls for plowing and spreading

The Barracuda™ electronic control system is designed to control dump, plow, tarp, granular and pre-wet applications. It combines full functionality and user-friendly operations in a compact package.

Barracuda™
9-channel control



Dump/Plow Controls

Proportional, incremental control for:

- Dump hoist (up/down)
- Plow lift (up/down)
- Plow reverse (left/right)

Spreader Controls

- Includes 3 channels for 2-or 3-channel operation
- Open-loop control for auger, spinner and auxiliary (pre-wet, X-conveyor) channels
- Adjustable settings from min to max
- Ground-speed oriented or manual spreader control
- Backlit control panel
- Keypad controlled trim settings (no trim pots)

Tarp Control

- Operator control for bi-directional tarp (electronic or hydraulic), electrical relays not included

Warning Lights

- Body Up, Low Oil, Filter Clog

Auto Shutdown Circuits

- Low Oil shut down and override circuit (requires sensor) and Body Up limit circuit (requires sensor)

Proportional Channels

- Independent control of 9 proportional channels

Hydraulic Trimming

- Configuration mode for hydraulic trimming without manual trim pots

Ground Speed Options

- Ground speed triggered (GST): starts with truck motion, off when truck stops
- Ground speed oriented (GSO): on with truck motion, automatically adjusts output to compensate for truck speed, off when truck stops
- Manual: no ground speed interaction

Output Signal

- Multiple frequency settings for ease of valve compatibility

Power Safety

- Power Safe™ signal prevents random grounds powering any attached hydraulics system
- Channel Safe™ detects and protects against open or short circuits on hydraulic drive channels

Operating Temperature Range

- Minimum: -20 degrees Celsius, Maximum: 70 degrees Celsius

Power Requirements

- Minimum: 11 Volts DC
- Maximum: 10 Amps
- Maximum: 15 Volts DC
- Fuse rated at 10 Amps

Blast and Pause

- Programmable blast included (on/off, timed)
- Use pause switch to pause spreading (with power on)
- System powers up in “pause” to prevent unintentional spreading


FleetPilot™
BY CERTIFIED POWER



YOUR FLEET, YOUR WAY. FleetPilot by Certified Power combines equipment controls, hydraulics, and telematics in one adaptable platform. Built for precision and growth, it easily scales from one vehicle to a full fleet and supports everything from routine work to critical operations.

Explore your options at fleetpilot.com.

10.08.2025 / Certified Power Solutions

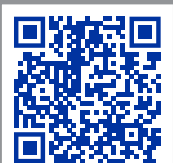

DOWNLOAD
THIS SHEET

Perrysburg, OH
(419) 873-7411

Fridley, MN
(952) 894-5700

Mundelein, IL
(847) 573-3800

Bridgeton, MO
(314) 344-3300

Des Moines, IA
(515) 244-7411

Dickinson, ND
(701) 225-8685